


Thank you for choosing GEEKVAPE

- For the best user experience, please read this user manual carefully before starting your vaping journey.
- Please retain this manual for future reference. If it is lost, visit our official website for a digital version or contact our customer support for assistance.
- This product contains a built-in battery. For transportation safety, the initial charge may be low. Please use the included charging cable to charge for 30 minutes before first use to activate the device.

Overview

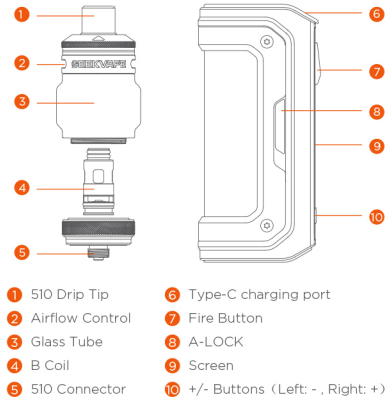


Product Specifications

E-liquid Capacity: 5mL (TPD Version: 2mL)
Dimensions: 138.2*39*28.6mm
Battery Capacity: 3200mAh
Resistance Smart Detection: Supported
Display: 0.96-inch TFT Screen
Output Power: 5-100W
Charging Specification: Type-C 5V/2A or 5V/3A


Instructions

1. Fill/Refill the E-liquid

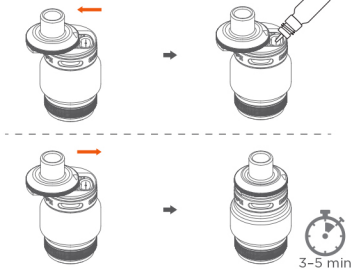

- Open the fill port: Slide the top-fill cap in the direction of the arrow until the fill hole is fully exposed.
- Fill with e-liquid: Insert the bottle nozzle into the hole, gently squeeze, and fill slowly. Pay attention and do not overfill.
- Close the fill port: Push the cap back into place.
- Prime the coil: If installing a new coil, wait 3-5 minutes after filling to allow the cotton to fully saturate. (Skip this step when only refilling.)

2. Change the coil

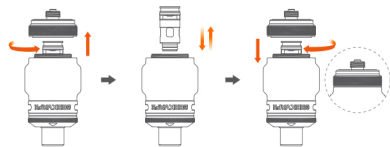


Under these circumstances you will need to replace the coil following guidance:

- when you notice the flavor starts to deteriorate or taste burnt.
- when you want to try a new flavor of E-liquid.
- when E-liquid is stored in the tank chamber for too long (usually over 2 weeks) and the color deepens (E-liquid may have oxidized over time).

Here is the guidance:

- Turn the tank upside down, then rotate the base counterclockwise to remove it.
- Use the toolkit included in the package to remove the old coil. If you wish to completely remove any residual e-liquid from the tank, rinse it with water and allow it to air dry before securely inserting a new B coil.
- Reattach the base by rotating it clockwise and ensure it is securely locked.

3. Tank tube replacement

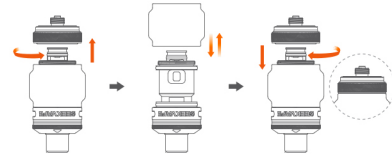

- Unscrew to remove the bottom hardware.
 - Gently push out the old glass tube. Dispose of glass products properly in accordance with local regulations, and take care not to injure yourself or others during the process.
 - Install the new glass tube into the tank.
 - Screw the bottom hardware back onto the tank.
- TIPS: When replacing the glass tube, check the position of the sealing ring to ensure it is correctly installed. If the sealing ring is worn, replace it with the spare one provided in the package to prevent leakage.

4. Drip tip replacement

This tank uses a standard 510 drip tip and comes with a 510 drip tip with a wider bore for high wattage output (usually above 60W).

You may also use other standard 510 drip tips. When purchasing drip tips online, ensure you select the 510 specification rather than other sizes.

5. Airflow adjustment

Adjust the airflow according to the coil's resistance and the selected wattage for optimal performance.

- Lower resistance and higher wattage require a more open airflow.
- Higher resistance and lower wattage require a more restricted airflow.

TIPS: Using high wattage with excessively restricted airflow may cause the vapor temperature to become too high, posing a burn risk.

6. Button functions

	PRESS Fire Button x3: Enter the Menu
	PRESS Fire Button x5: Power ON/OFF
	+/- Buttons: Navigate Options / Power Adjustment
	Press and hold both +/- Buttons: +/- Buttons Lock/Unlock
	A-LOCK: Device Lock/Unlock

7. Menu setup

MODE: Press the fire button 3 times within 3 seconds to enter the menu and select MODE. The device supports two modes: POWER and SMART.

- POWER MODE: If you are using the GEEKVAPE Z Series Coil or tank from other brands, it is recommended to use this mode. You can adjust the wattage between 5W and 100W. Please ensure the wattage remains within the recommended range indicated on the coil.

- SMART MODE: If you are using the GEEKVAPE B Series Coil, it is recommended to use this mode. The device will automatically alert you if the power setting exceeds the maximum limit for the installed coil. Exceeding the power limit may cause coil burnout or result in poor flavor.

PUFF: Press the fire button 3 times within 3 seconds to enter the menu and select PUFF. Choose the RESET option to clear the puff count.

COLOR: Press the fire button 3 times within 3 seconds to enter the menu and select COLOR. Five theme colors are available for selection.

ANIMATION: Press the fire button 3 times within 3 seconds to enter the menu and select ANIMATION. You can choose to turn the vaping animation ON or OFF.

INFO: Press the fire button three times within 3 seconds to enter the menu and select ABOUT, then choose INFO to view device information.

RESET: Press the fire button 3 times within 3 seconds to enter the menu and select ABOUT. Then select RESET to restore the device to factory settings.

Protections

If an operation error or abnormal working environment occurs, the device will stop functioning and display the corresponding message on the screen:

SHORTED CIRCUIT: Tank pin short circuit detected. Please replace the tank, and check and clean the device pins.

NO COIL DETECTED: The device cannot detect the coil, or the pin contact is poor. Please check whether the coil is properly installed and clean the pins to ensure good contact.

LOW BATTERY: The battery level is too low and needs to be charged promptly. If the device has been used for over a year and charging performance has degraded, the battery may need to be replaced.

OVERHEAT: The device temperature is too high and should be moved to a cooler environment. This often occurs in tropical regions, during hot summer days, or when the device is left in a closed car for an extended period. It is recommended to place it in a cool area to allow it to cool down.

10S TIME OUT: The fire button has been held down for more than 10 seconds, possibly due to accidental activation in a pocket or bag. It is recommended to enable A-LOCK when not in use.

OUT OF RANGE: If the tank resistance is detected to be too high or too low before or during use, the device will stop functioning.

DEVICE LOCKED: The device is currently locked and the buttons cannot be used. To unlock it, slide the A-LOCK switch.

+/- BUTTONS LOCKED: The +/- buttons are currently locked and power adjustment is not possible. To unlock, Press and hold both +/- buttons for 3 seconds.

Attention

- Keep away from flammable and explosive materials to avoid injury.
- Do not leave the device unattended while charging.
- Keep out of reach of children, minors, and pets.
- Do not dispose of used coils/Tank in regular household waste, water systems, open fire, or by crushing, as they may contain residual nicotine or e-liquid, which could pose environmental and safety risks.

Customer Service

Main Page: www.geekvape.com
Address: 605, Building 1, Qianhai Kexing Science Park, Labor Community, Xixiang Street, Bao'an District, Shenzhen
Phone: (001)866-985-6876
Email: support@geekvape.com
Available time: 24/7

Anti-counterfeiting Check

- Go to www.geekvape.com and find PRODUCT VERIFICATION at the bottom of the main page.
- Scratch the code bar under the label on the box and enter the 12-digit security number in the blank on the webpage.
- Click 'Go' and a pop-up window shall appear confirming if your product is authentically made.